

If the knob is turned clockwise while the watch is counting, the display stops and the lap time is displayed. (Although the display is stopped, the watch continues counting)

If the knob is turned clockwise again, the stop watch display is restored. If the knob is depressed while a lap time is being displayed, the stop watch will stop counting; if the knob is turned clockwise, the time when it stopped will be displayed.

If one hour is exceeded, the stop watch displays the time in hours and minutes. If 24 hours are exceeded, display returns to 00:00.

To restore the time display (in hours and minutes), turn the control knob once counterclockwise.

How to adjust time display

Press the adjusting knob with the tip of a pencil; time (minute and hour) and day (date and month) can be adjusted in order.

When the adjusting knob is pressed, the displayed item which can be adjusted is indicated by flashing; turn the control knob clockwise for adjustment. If no adjustment is needed for a displayed item that is flashing, simply press the adjusting knob; flashing will move to the next item.

Upon completing adjustment, press the adjusting knob again, and the hour and minute display will be restored.


To set the clock by the time signal, press the control knob when the "minute" digit in the minute and second display is between 59 and 01; this will change the display to 00 minute 00 second.

1. After completing adjustment on the desired item, depress the adjusting knob until flashing disappears from the display.

2. When the power supply is connected again and the ignition switch is set to "ACC" or "ON" after removal of the battery or disconnection of the power line, the clock will display the time of 12:00 in hours and minutes, or the date 1 1 (Jan. 1st).

If disconnection of power supply is only for a short period, the time passed over may be displayed.

CIGARETTE LIGHTER AND ASH TRAY

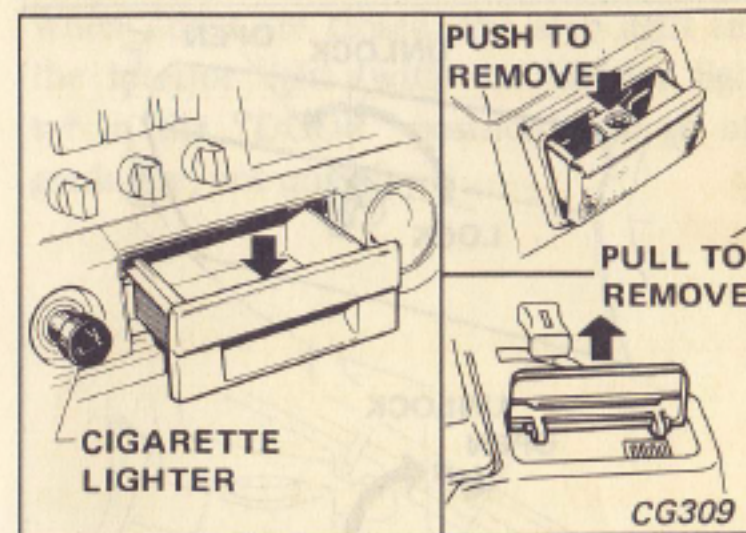

CIGARETTE LIGHTER

Push the knob in all the way and release it. When the lighter springs back to its original position, it is ready for use.

Replace the lighter in its original position after use.

ASH TRAYS

To remove the ash tray for cleaning, open the tray and pull it out while pressing downward. To install the ash tray, insert the side rail of the tray into its holder, then close the tray.

2+2 model

The ash tray for rear seat occupants is located at the rear end of the console.

It can be removed either by depressing the center lever, or by pulling the tray out.

Do not use the ash tray as a waste receptacle.