## 2001 - 2007 Toyota Hilander Clock Fuse Info

Before you remove the Hilander Clock, please check to be sure that the fuse controlling the clock module is OK.

Does the <u>climate control</u> light up? If not then in the under hood fuse box (left of drivers side) check the ECU-B fuse should be 7.5 amp. Check the heater fuse in the fuse box inside the <u>car</u> it should be 15 amp. If the fuses are OK and only the clock is bad. www.autoclockrepair.com