

1995 - 2004 Toyota Tacoma Clock Removal Instructions
www.autoclockrepair.com

Tools required:
Phillips Screwdriver
10 mM socket

Time Required 5-10 minutes

1. Check to be sure that the 15A Cig fuse is not blown. If it is then the clock is OK (no need to send in) and the fuse needs to be replaced. If clock still does not work after fuse replacement continue with removal




2. Begin by removing the screws on the lower left pane



3. Next remove the screws/bolts form the right side of the panel



4. Remove this screw

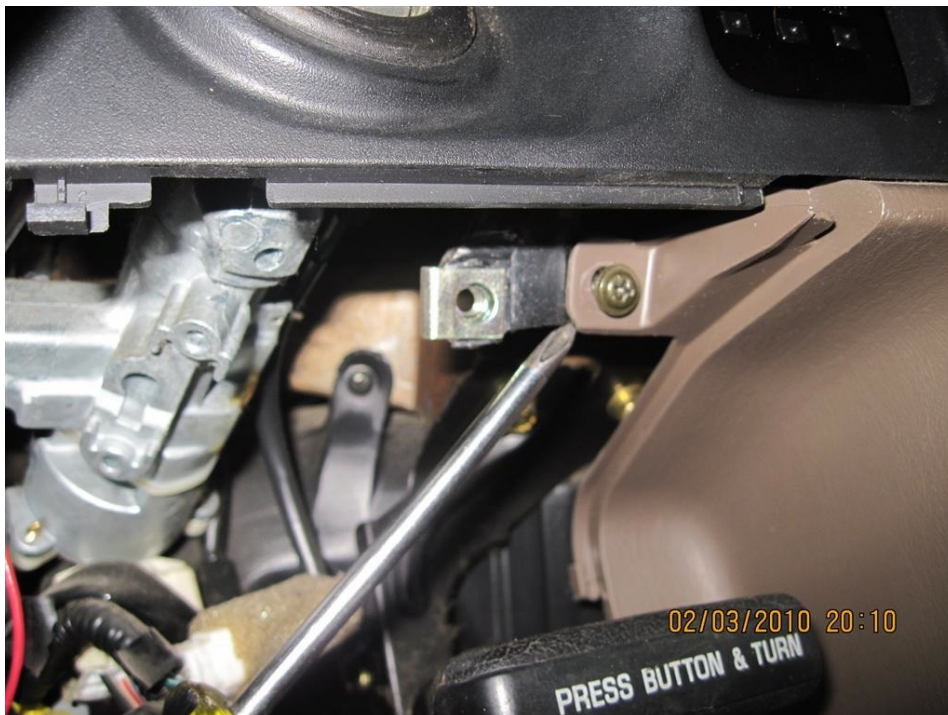

5. The lower panel should pop out at this point



6. Next, remove screws holding lower steering wheel cover in place



7. You now have access to the clock bezel, remove it and unplug clock from wiring harness



8. Unscrew clock form bezel and you are done!

