## Ford truck and SUV Overhead Console Removal and Installation Instructions

Tools needed:

T10 torx bit

phillips screwdriver

Time required; 10-15 minutes

These instructions are based on a Ford Explorer Console. Each Model varies slightly but the general principle is the same.


1. If your overhead console has a storage compartment, open it and remove the 2 phillips screws



2. Gently pull at console, there should be 2 retaining clips holding the console to the headliner. Unplug main wiring harness from overhead assembly



3. Remove the 7 Torx screws. Store in a safe place for installation.

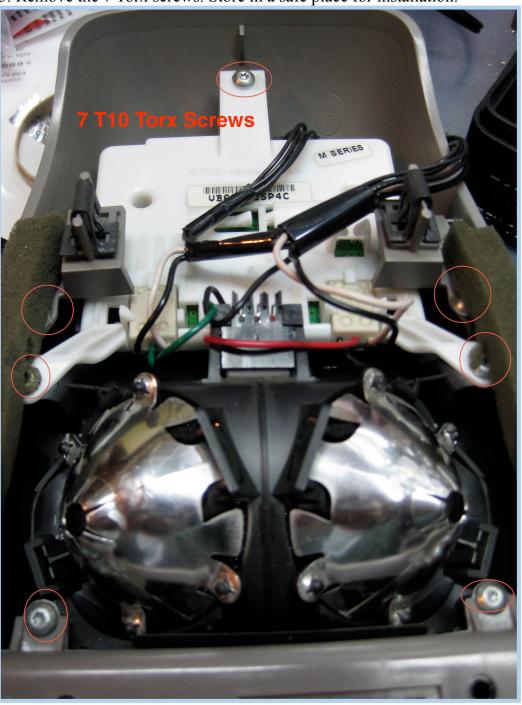

4. Remove console and lights (white and black units) from bezel (grey unit).

5. Remove the 3 electrical connectors for the console




6. Remove Display unit and send off for repair.

Installation is reverse of removal with a few small tips:

1. Insert the 2 screws as shown to align lights and display prior to complete assembly.



2. Slide tab into bezel as shown

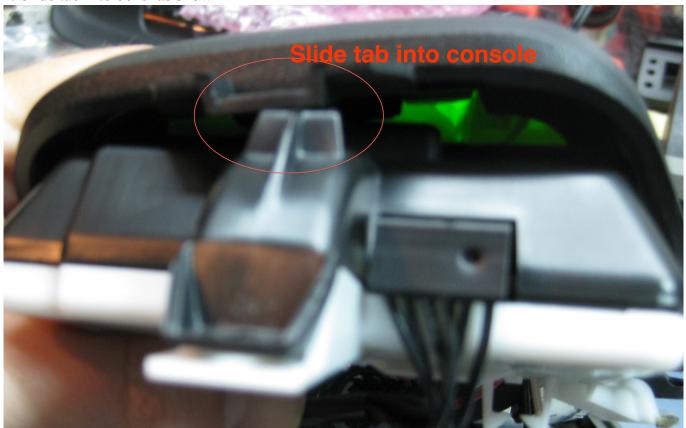

3. Align tab when putting everything together.



www.autoclockrepair.com