

1996 - 2004 Nissan Pathfinder Clock Removal Instructions
Property of www.autoclockrepair.com

Tools required:

Phillips screwdriver

Thin bladed tool (butter knife wrapped in tape works well)

Time Needed:

5-10 Minutes

1. Optional: Disconnect negative terminal on battery



2. Use a flat bladed tool to remove panel. A butter knife works well, but cover with masking tape to prevent damage to trim panel




3. Start on one end of panel (on 2001 Pathfinder the panel tapers on right side and is easy to start there) and carefully work that end off. Then proceed slowly and work your way around the panel until it pops off.
4. Tilt the vent/clock panel so that the 4 screws are exposed underneath. Remove the 4 screws.



5. Separate the vent panel from the clock by pushing it away from the front of vent panel
6. Clock is now separated from vent panel. Put vent panel in safe place



7. Remove the connector from clock by pushing the small tab at bottom of connector

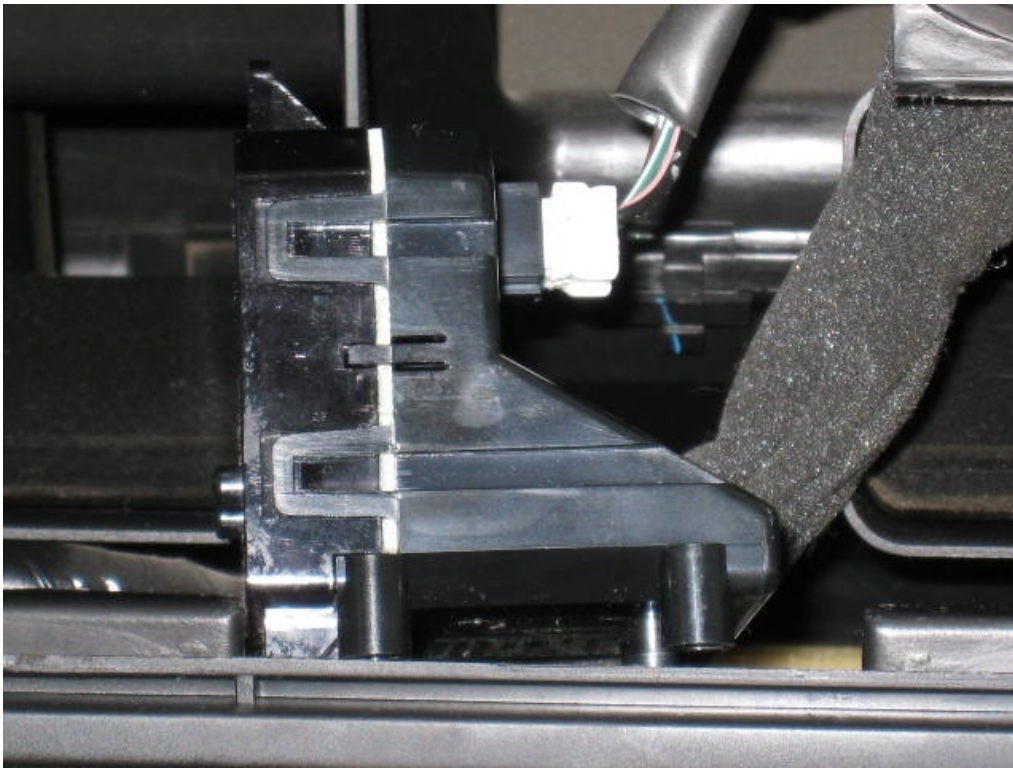

8. Clock is now removed



9. Do not open the clock face panel. You could damage the locking tabs or lose some small parts within the clock. The clock is ready to be shipped to www.autoclockrepair.com!

10. Re installation of clock to vent panel is opposite of removal instructions

Key Words:

How to remove clock removed

How to fix Panhard Clock

Panhard clock does not work

Panhard clock works again