

2003-2008 Toyota Matrix Clock Removal Instructions

Property of www.autoclockrepair.com

No tools needed (needle nose pliers may help with clock wiring harness)


1.



2.



3.

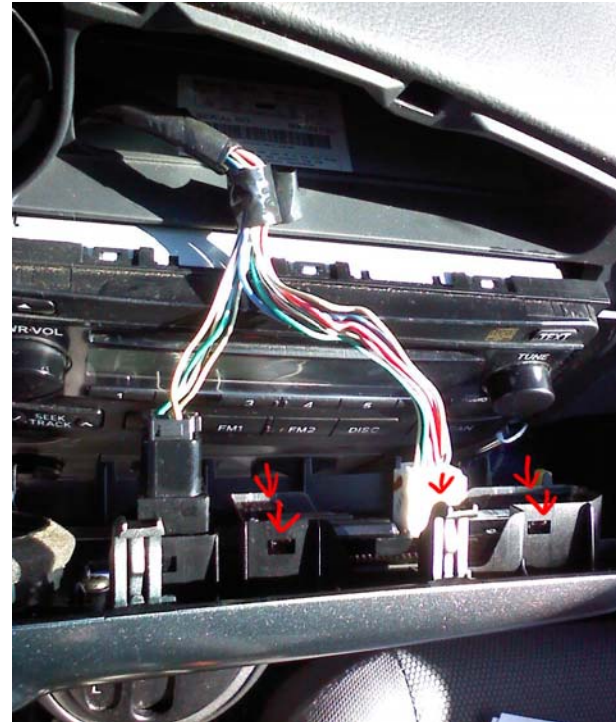

1. Place fingers under removable panel and gently lift.

2. It should hinge at the top. Lift until the whole panel comes off.

3. Then you'll see four clip-in slots where the clock is being held in place. 2 on top and 2 on bottom (red arrows). Pull the slots (that are on the panel) away from the clips (that are on the clock) and push the face of the clock in so it will pop out through the back. Remove white power source by holding down the tab and pulling back.

4. Send off to www.autoclockrepair.com (please read shipping instructions for full details)